Bulldog Rail Frame Assembly

RAIL

Reconfigurable. Accessory. Integrated. Load Carriage System

Jason Simione

Rail Frame

Reconfigurable. Accessory.
Integrated. Load Carriage System


This Pack Frame is compatible with all Molle Pouches. The Pouches can be Mounted Vertically or Horizontally.

The Pack Frame has a Load capacity of 400 Lbs.

The removable Platform can be used to carry Ammunition Cans, Mortars, Batteries, Water, or any other Bulky Items.

Constructed from Aircraft Aluminum, which is CARC (Chemical Agent Resistant Coating) Coated.

Any damage to the frame can be hammered back into place with a hammer!

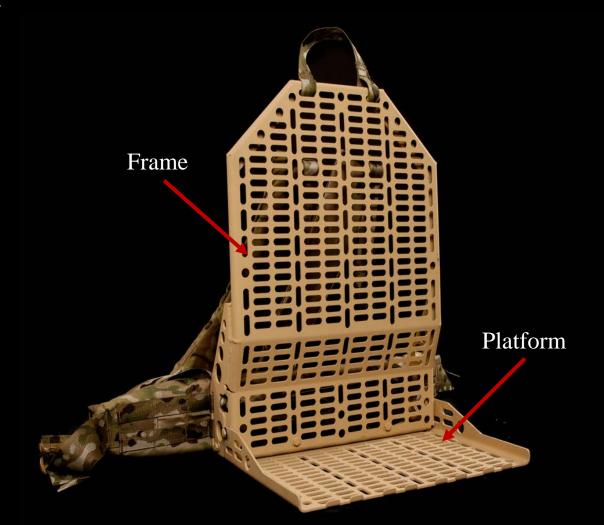


Rail Platform: Equipment Platform with secure strap. Designed to hold Ammo Cans, Batteries, Food, Water, Load Capacity 150 Lbs! Qty (1)





Rail Frame Qty (1)

The Platform folds up

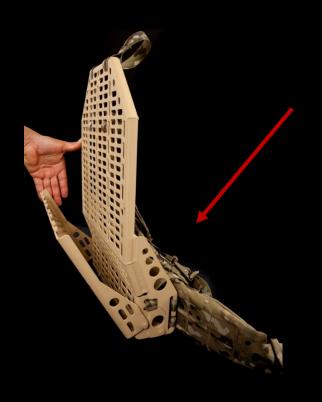

The Platform folds directly against the frame.



Rail Platform: Equipment Platform with secure strap. Designed to hold Ammo Cans, Batteries, Food, Water


Load Capacity 150 Lbs. Qty (1)




Rail Assembly and Extra Hardware

The Platform is removable, Nylock Nut and Bolts, All Stainless Steel Hardware

These Bolts are Extra Hardware Qty (2)

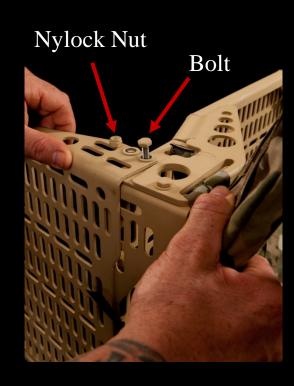


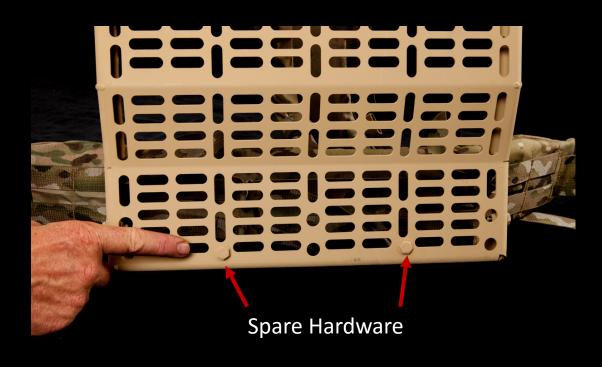

Shoulder Pads/ Waist Belt Qty (1) Each



Shoulder Pads/ Waist Belt

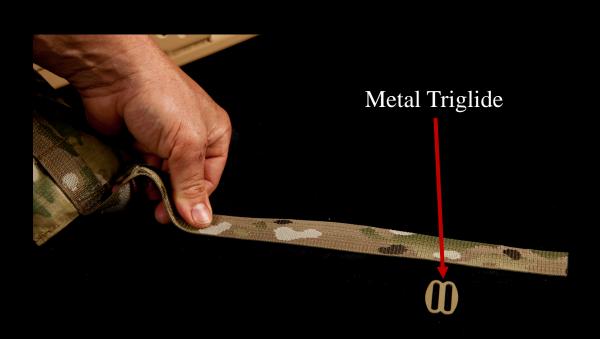

Weave webbing through Triglide



Mounting to Frame

Place webbing through triglide







Securing Shoulder Straps

Secure webbing through Triglide




Pull Tight



Securing Triglide

Weaving webbing back over itself

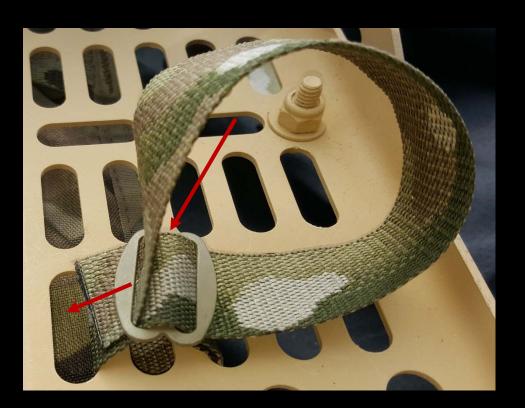


This is Most Secure



Securing Triglide

Pull Tight

Secured

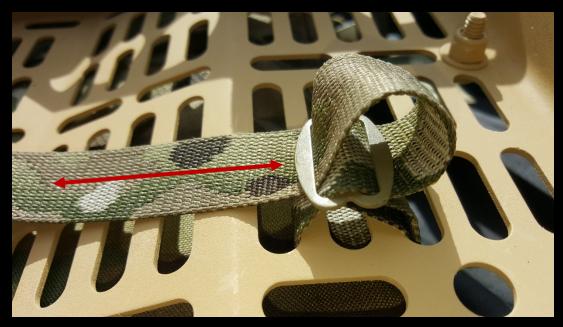



Lower Portion Shoulder Straps

Place Sewn Loop through Frame



Place Sewn Loop through Frame




Finished Lower Portion

Place clip through loop



Pull Tight

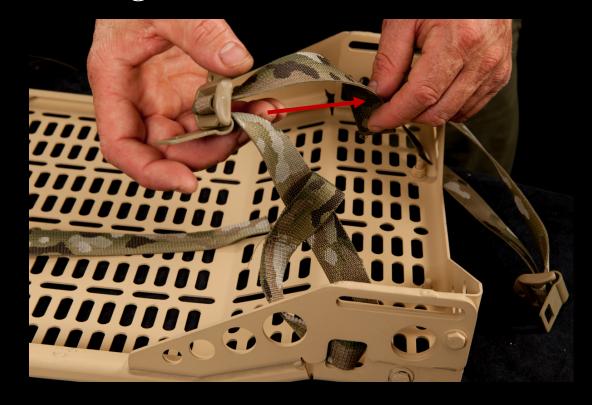

Tying Release Clip Qty (2)

Place 550 chord through slot



Tie over hand knot



Finishing 550 Chord Quick Release

Pull Knot Tight



Dressed Knot



Activate Quick Release, Pull on Chord

To Activate Release Pull Chord






Chest Strap Qty (1)

Secure Chest strap around Shoulder Pad.

Secure with Triglide



Waist Belt Qty (1)

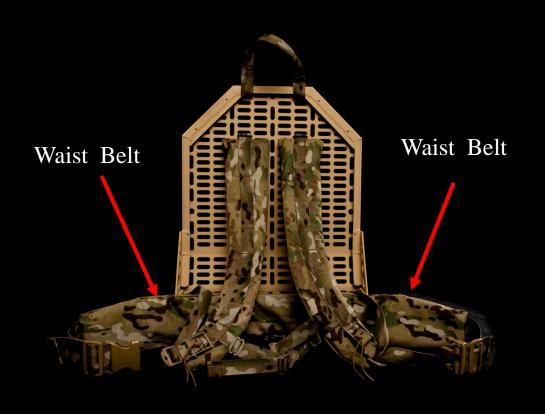




Waist Belt

Place 2 Ladder Locks and 2 pieces of webbing through 3 Inch vertical Slots

Weave webbing through Ladder Lock

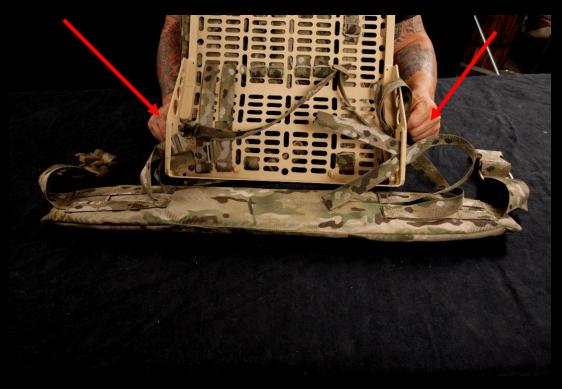




Once webbing is laced through, Pull Secure.

To Secure Pull with Pliers



Pull Tight to Secure Waist Belt

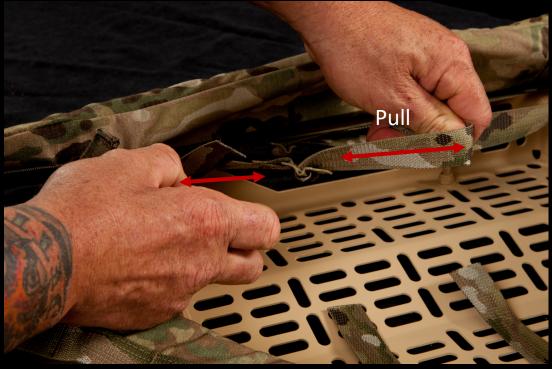

60mm Mortar Kit Components: Leave all Rounds in the Tootsies, Place tootsie in the reinforced pack.

5 Round Plastic Reinforced Carrier Qty (1) Each



5 Round Carrier with 60 mm Mortar Base Plate Mounted in Place



5 Rd Carrier with60mm Mortar Tube

Leave Rounds in Card Board Tootsies when placing in the single round mortar pouches!!!

• (7) Single Mortar Pouches



Mortar Cover Qty (1)



Mortar Computer Pouch Qty (1)



Heat Mitt Qty (1)



Plastic Reinforced M65 Mortar Sight Pouch, Shoulder strap and removable Molle is inside the pouch. Qty (1)



Linear Range Scale Cover Qty (1)

Single Round Mortar Pouch Qty (7) Each





Multipurpose Pouch, It will contain a 100 OZ bladder (Not Included) or other needed items. Weight 4 Ounces

Multipurpose pouch, Hydration or other mission essential items Qty (2) Each

100 Oz bladder is inside. Qty (2) Each



Spare Parts, includes 3 feet of 1 inch webbing, 3 feet of Bungee, 6 Triglides, 6 Male Fast Tacks, 6 Female Fast Tacks, 6 Quasms


2 Day Pack with Shoulder Straps Qty (2) Each





Equipment Platform with secure strap.

Qty (2) Each

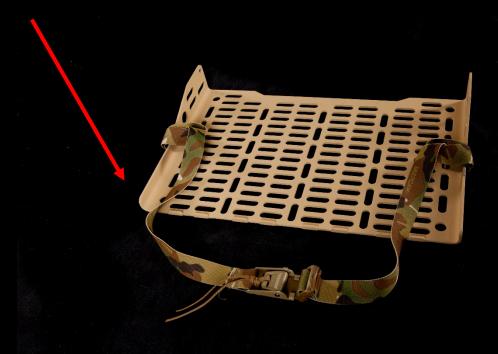

Shoulder Straps Qty (5): 1 set for each Pack and an extra set of shoulder straps are for those that want to pass of the 60mm Mortar tube to another Squad member, Zip ties can be used to secure the Tube.



60 MM Mortar Kit


5 Rd Plastic Reinforced Pack, 8 points of attachment.



Mount attachments outside Rail of Frame




Secure Triglide in the Same Manner by locking it in place once the 5 Rd plastic reinforced pack is in position.

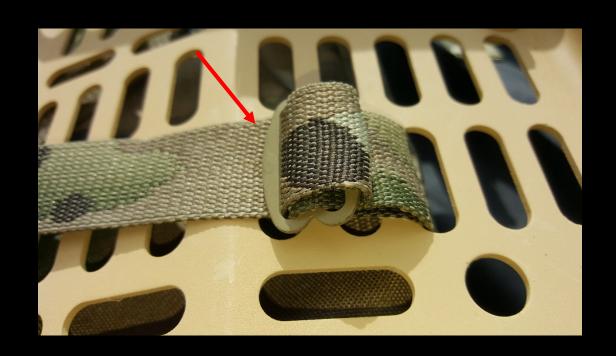

Secure Triglide

In the Same Manner by locking it in place once the 5 Rd plastic reinforced pack is in position.

Weaving webbing back over itself

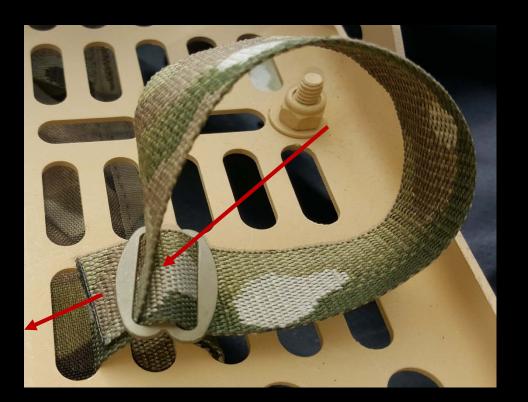


This is Most Secure



Securing Triglide

Pull Tight

Secured

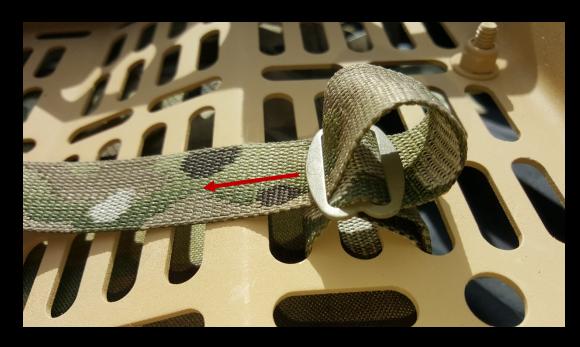




(3) 60 mm Mortar Tube Retention Straps



Mounting Mortar Tube Retention Straps

Secure in same manner as shoulder strap, Just on the side of the frame, This is example of how to secure strap.

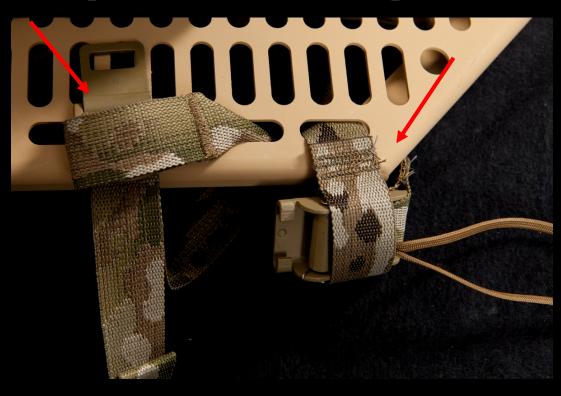

One on top, one in center, one on bottom of frame. When placing mortar tube in straps always start with Center Strap.



Mortar Tube Retention System

5 Single Round Pouches/ 60mm Mortar Tube Carrier mounts anywhere. Some prefer the Right Side or Center.



Loop the release Buckle through the frame and back through itself.



Mounting Clip to Mortar Pouch





2 Day Pack Mounts over the 5 round carrier that is not plastic reinforced. Qty (2)





Two straps connect over the top, two on the side. Push male clip through loop, pull tight, connect to pack.



